
XPENG G6 User Guide

(Condensed Version)

V1.1 August 2024

○ Your I-KEY	3
○ Charging port	4
○ Trunk and front bonnet operation	5
○ Interior seat functionality	6
○ Doors and windows functionality	7
○ Steering wheel functionality	9
○ Emergency unlock	13
○ Brake regeneration control	14
○ Driving assistance system	15

 


1. Lock button
 - Press once to lock
2. Trunk opening and closing button
 - Press twice to open/ close trunk
3. Unlock button
 - Press once to unlock
4. Charging port cover opening and closing button
 - Press twice to open/ close charging port

Replacing your I-Key battery



1. Press the cover button and remove the base cover
2. Flip and remove the back of the key
3. Replace the CR2032H battery

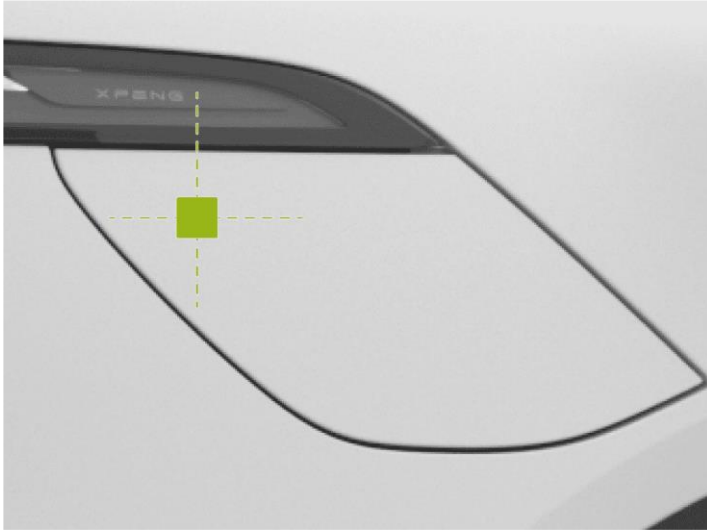

- Charging port can be opened & closed from the Central Information Display (CID) or by pressing the charging port button twice on the I-Key.
- When vehicle is unlocked, press the upper left area of the charging port cover to open
- Remove the dust covers depending on your charging plug. Once inserted, the plug is secured
- To remove, end charging from the Central Information Display or the charging station
- Fit the dust cover and press the lock button to close

Trunk Operation



- Trunk can be opened by the I-Key or pressing the external switch above the number plate when vehicle is unlocked
- Angle can be adjusted via the Central Information Display or open to a desired angle, press and hold the trunk internal switch until an audible sound is heard to capture the memory

Front Bonnet Operation



- Front bonnet latch is located on the lower, right side of driver seat
- Pull twice to unlock and release the front bonnet

Front Seats Adjustment



 
- Front seat adjustments are on the side for both driver and passenger
- 6-way adjustable
 - Forward<>backward
 - Upward<>downward
 - Incline<>recline
- Driver seat has additional lumbar support that can be adjusted from the Central Information Display

Rear Seats Adjustment



Rear Backrest Adjustment

Pull the lever and recline the seats backwards

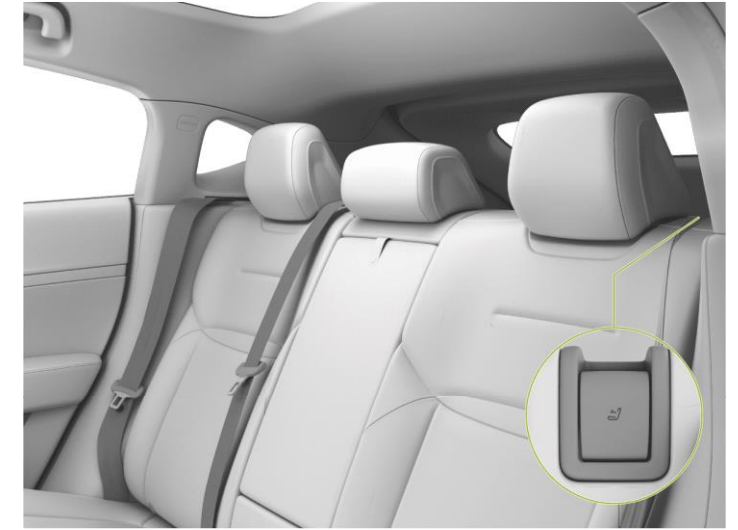

Folding down your rear seats

 
- Pull the lever on the top of the seats and incline forward
- To restore, gently pull up the seats



- Locking and unlocking of the doors are electrically operated
- Lock switch from the driver switch locks all windows



- All doors are electronically operated
- Press to open, only when vehicle is stationary

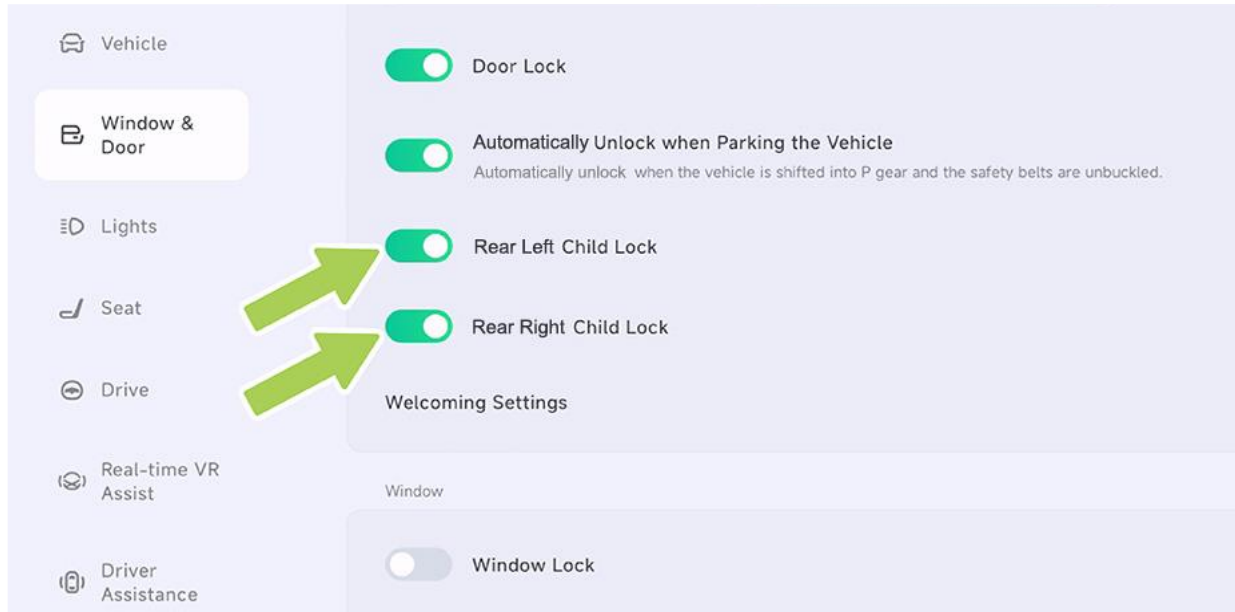


Child safety lock can be activated through the Central Information Display for both left and right passenger doors




Overhead control functionalities

 
- Hazard light
- SOS: Press and hold for 3seconds and again to cancel
- Emergency power-off switch: Press and hold for 5seconds to power off

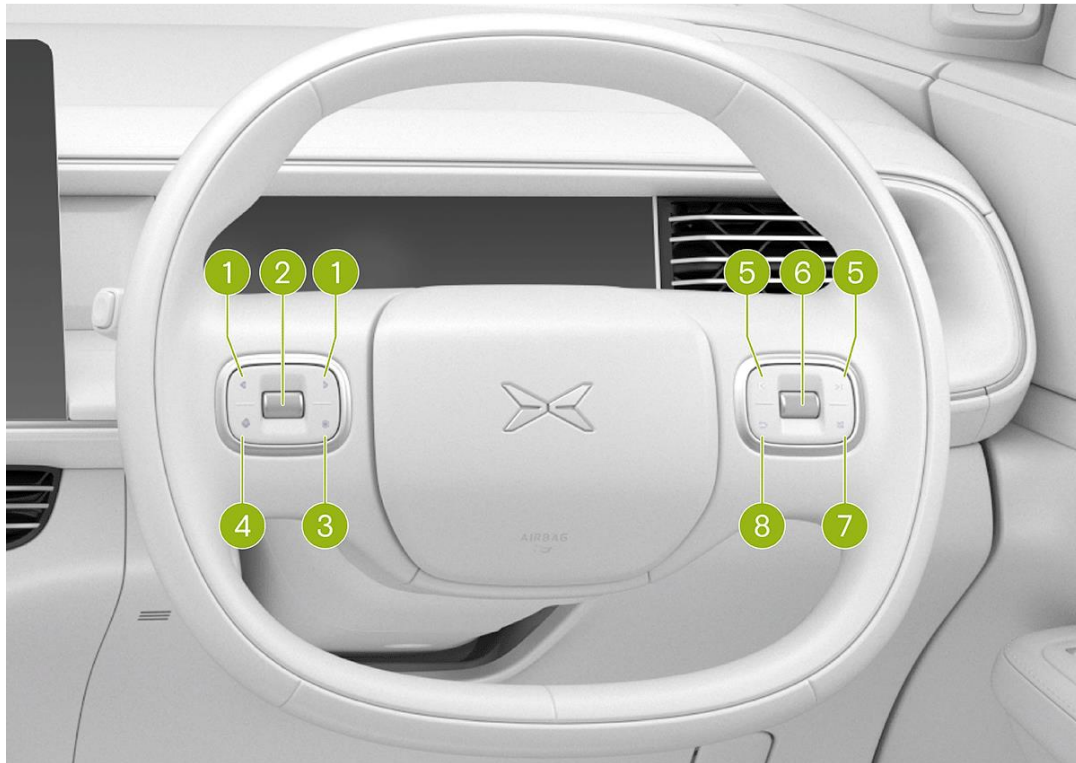

1. Left and right buttons:
 - Default: Adjust the A/C blower speed
 - With ACC activated, adjust the cruise distance
 - After activating the adjustment of exterior rearview mirror, control the left exterior rearview mirror to turn leftward or rightward
2. Upper and lower rollers:
 - Roll up and down to adjust the A/C temperature
 - Tap and hold it to enter the card switching mode on the left screen of the instrument panel, scroll up and down to select cards, and tap to confirm selection.
 - With ACC on, scroll up and down to increase or decrease the speed
 - After activating the adjustment of exterior rearview mirrors, roll up and down to turn over the left exterior rearview mirror

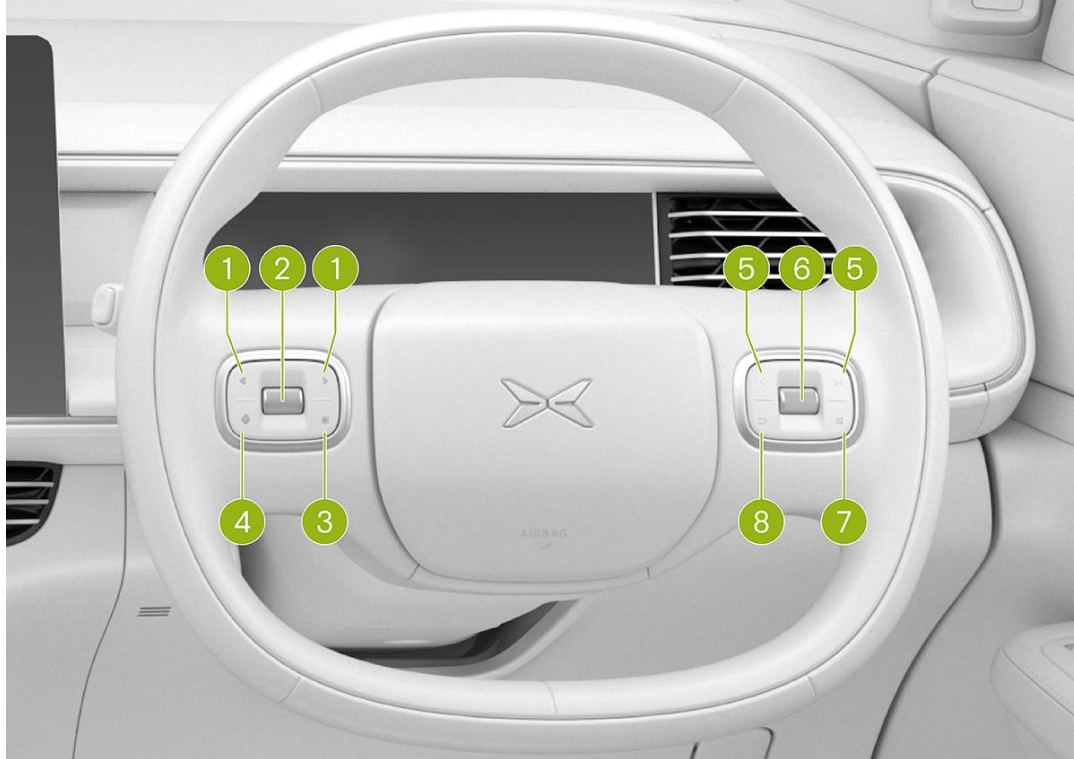 


3. Steering wheel shortcut key:
 - Tap and hold this key to set the function of it, and tap it to execute the set function.
4. XPENG Voice wake-up button
5. Previous/next song button
 - After activating the adjustment of exterior rearview mirror, control the right exterior rearview mirror to turn leftward or rightward
6. Upper and lower rollers
 - Scroll up and down to adjust the media volume
 - Tap the multimedia play/pause/pop-up window to confirm.
 - Tap and hold it to enter the card selection status on the right side of the instrument cluster
 - When there is a phone call, scroll up/down to answer/Reject, and tap the scroll wheel to confirm
 - During the call, tap it to hang up
 - After activating the adjustment of exterior rearview mirrors, roll up and down to turn over the right exterior rearview mirror
7. Mute button
8. Return key

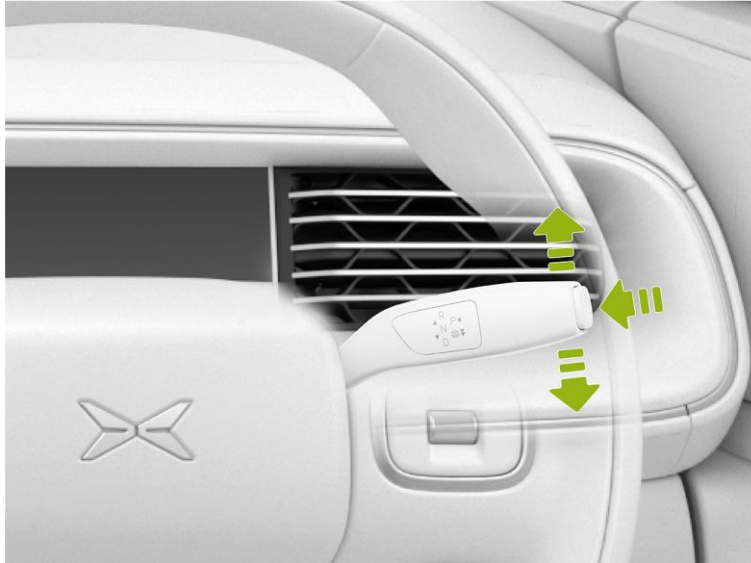 

Changing of Gear

 - Press the brake pedal, move the shift lever up or down, and the gear indicator will light up
- Electronic parking brake is automatically activated/deactivated when in D or P Gear
- The vehicle will automatically shift to P gear at (1) speeds below 3km/h, (2) driver seat belt is unfastened, (3) brake or accelerator pedal is not depressed, and when the driver side door is opened.

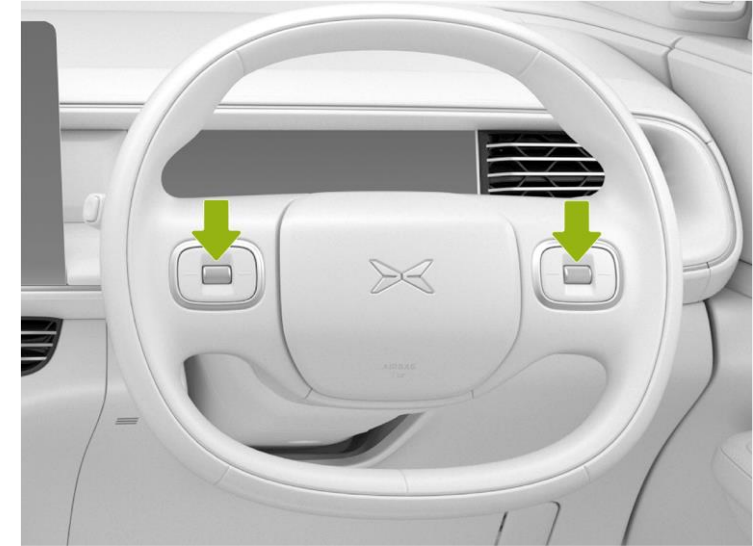


Side Mirror Adjustment

- On the Central Information Display, tap the Car icon → Drive → Side mirrors
- After the exterior rear view mirror is activated, the rollers & upper buttons on the steering wheel can adjust the respective mirrors



Turning on/off signal lights

 - Move the combination switch downward to turn on the left turn signal light
- Move the combination switch upward to turn on the right turn signal light
- Single tap of the signal stalks would temporarily flash the signal light 3 times.

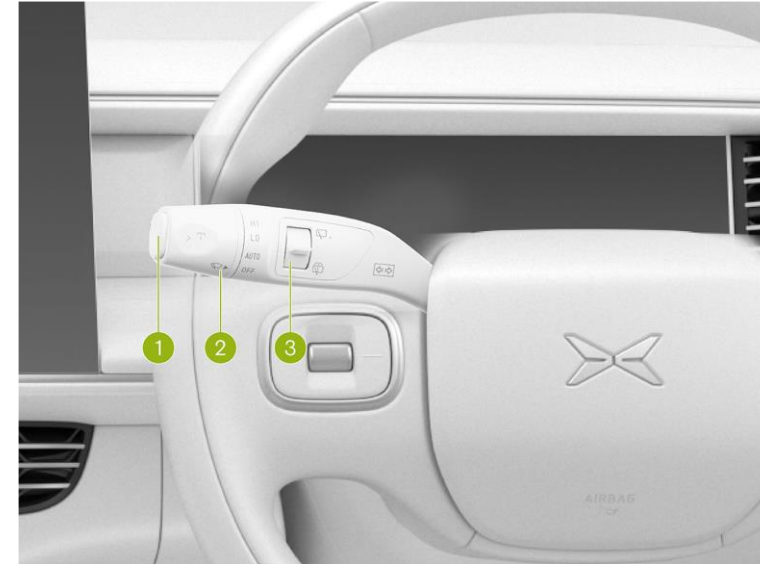


Wiper Operation

1. Washer switch
 - Press and release: Wipe once
 - Press and hold: The front washer sprays water and wipes
2. Front wiper switch
 - Off: Stop wiping
 - Auto: Wipe according to rainfall
 - LO: Low-speed wiping
 - HI: High-speed wiping
3. Rear wiper switch
 - Move up: The rear wiper wipes/the rear wiper stops wiping.
 - Move down and release: The rear wiper wipes once.
 - Move down and hold: The rear washer sprays water and the rear wiper



 - Emergency mechanical key lock hole is behind the driver door handle
- Insert, turn counter clockwise and pull handle to open the door
- Turn the mechanical key back to original position to remove

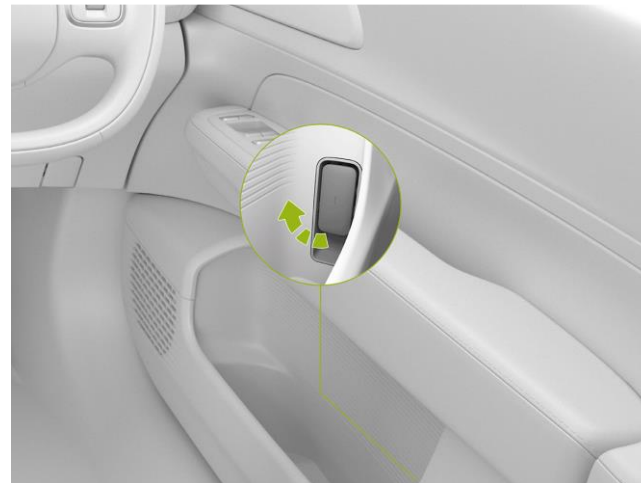


Emergency opening of front doors

- Pull the emergency opening handle at the side of front door storage box to open the door




Emergency opening of rear doors

 - Press open the access cover below the rear door armrest
- Pull the emergency opening handle to open the door

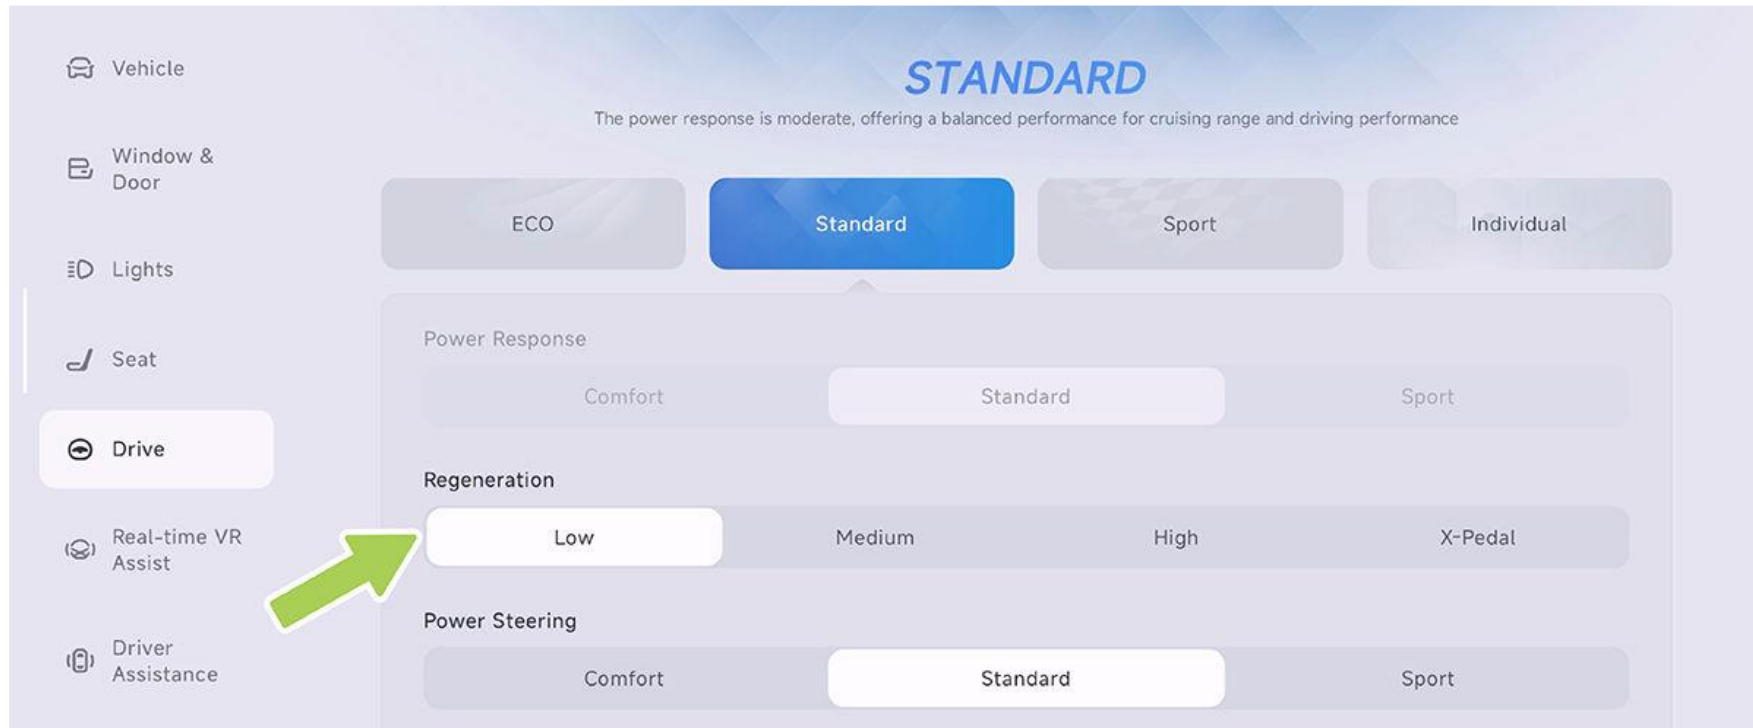


Brake regeneration can be adjusted from the Central Information Display.

 - Low (low energy recuperation and low retardation)
- Medium
- High
- X-Pedal (one-pedal driving with highest energy recuperation and strongest retardation)

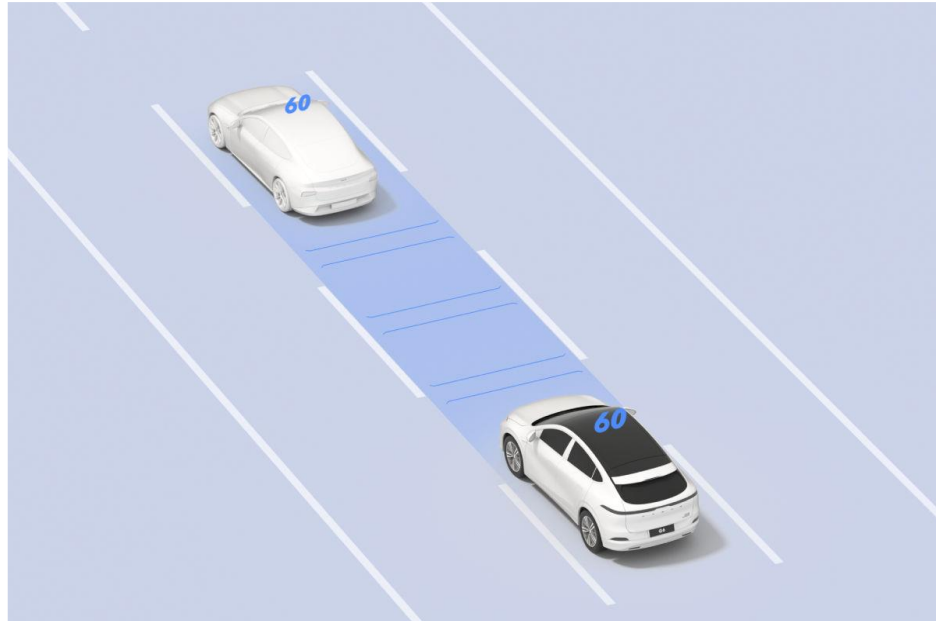

Adaptive Cruise Control

 - To activate, push the right-side gearshift lever downward to the end once.
- ACC will be displayed on the Instrument Cluster Module, with blue circle with set speed
- Use left-side steering wheel scroll to set speed, and the arrow keys to set distance with the vehicle ahead

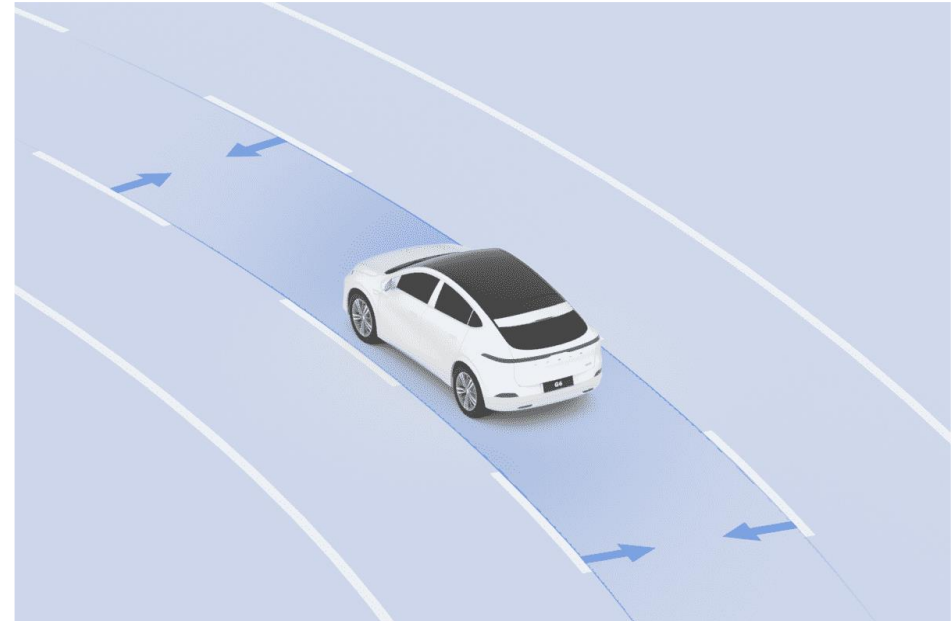

Lane Centering Control

- To activate, push the right-side gearshift lever downward to the end TWICE.
- LCC would be displayed on the Instrument Cluster Module with a blue steering wheel icon with LCC
- When LCC is activated, ACC simultaneously activates

To deactivate the driving assistance, depress the brake pedal or push the right-side gearshift lever UPWARDS

Disclaimer: All driving assistance function serve as an assistance. The driver is responsible for safe driving at all times

Thank You

Useful hotlines:

24-hour XPENG Roadside Assist 6717 2111

XPENG Service Centre 6816 2221